


HOWO TRUCK
SPARE PARTS CATALOGUE

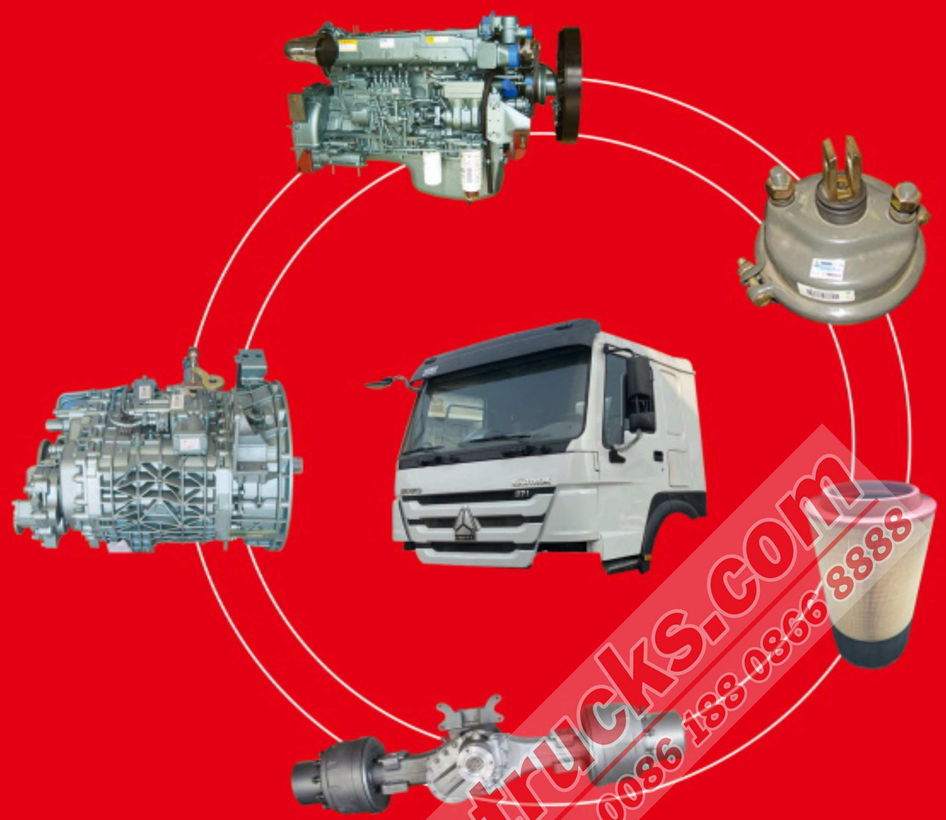

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

CS TRUCKS GROUP LIMITED

Add : National industry zone, suizhou city, hubei province, china.
Http: www.howotrucks.com
Tel :+86 188 0866 8888
Email :info@howotrucks.com
Whatsapp : +8618808668888

HOWO TRUCK SPARE PARTS

重汽驾驶室系列 SINOTRUK CAB SERIES



HOWO 10款驾驶室–外饰件 HOWO 10 CAB–Exterior Parts



www.howotrucks.com
WhatsApp: 0086 188 0866 8888



HOWO TRUCK SPARE PARTS



豪瀚N7G驾驶室–外饰件 HOHAN N7G CAB–Exterior



保险杠/副杠
Bumper
WG9525930201/WG9525930202



前面罩 Front Cover
WG91671110111



大灯 Headlamps
WG9525720025/WG9525720026



脚踏板支架
Foot pedal bracket



翼子板前端 Front end of fender
WG1671230202/WG1671230201

翼子板后端 Rear end of fender
WG1671230204/WG1671230203



后视镜Rearview mirror
WG1671770120
WG1671770110



面罩骨架 Mask skeleton
WG1671110133





前防护总成
Front protection assembly
WG9525931500



保险杠骨架
Bumper beam
WG9525930208



遮阳罩
Visor
WG1671870010




车门壳 Door shell
WG1671210104/WG1671210103




装饰条
Decorative strip



液压锁上支架
Hydraulic lock upper bracket

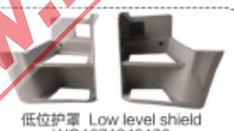

低位护罩 Low level shield
WG1671240198
WG1671240197

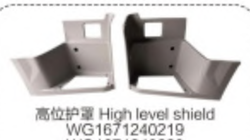

高位护罩 High level shield
WG1671240219
WG1671240220



车门铰链 DOOR HINGE



挡泥板 Mudguard
WG1671230502/WG1671230501



前面罩Front Cover
WG91671110111






翻转轴 支架
Flip axis bracket



保险杠下踏步骨架
Bumper lower step frame



外把面板锁
Outer handle lock plate

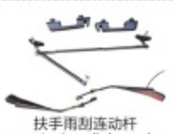

扶手雨刮连动杆
Armrest wiper linkage lever



扰流板 spoiler
WG1671110139/WG1671110140


豪沃 T5G 驾驶室—外饰件 HOWO T5G CAB–Exterior



散热器面罩
Radiator Mask
WG1662115010



保险杠下部（加强型）
Bumper Lower Part
WG1664245038



保险杠下部（铁）
Bumper Lower Part (Iron)
WG1664245018



保险杠左右段
Left And Right Bumper
WG1664245003/5004



导流罩大顶
Shroud Large Top
811W62910–0130



保险杠中段
Middle Bumper
WG1664245001



导流罩小顶
Shroud Small Top
811W62910–0216



保险杠装饰网
Bumper Decoration Net
WG1664245002






导风罩总成（左/右）
Air Hood Assembly (L/R)
WG16621150055/006



前装饰板
Front Decorative Panel
WG1662115025



车门窗框
Door Window Frame
810W62630–0056/0057

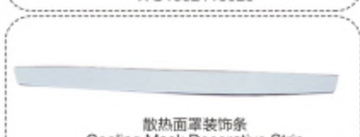

散热面罩装饰条
Cooling Mask Decorative Strip
WG1662115015

高顶A立柱
High–top A Column
WG1664115001/5002

面罩装饰总成
Mask Decorative Panel
WG1662115016

车门下饰板外板（左/右）
Door Trim Panel Outer Panel (L/R)
WG1664335101/5102

车门下饰板内板（左/右）
Under Door Trim Panel (L/R)
WG1664335103/5104

车门护板总成
Door Guard Assembly

前天窗装饰灯（左/右）
Front Skylight Decorative Light (L/R)
812W25260–6003/6004

高顶遮阳罩 High Ceiling Sunshade 812W63701–0003

翼子板前段（左/右）
Front Section Of The Fender (L/R)
WG1664235003/5004

窄体踏板（左/右）
Narrow Body Pedal (L/R)
WG1664245209/5210

前翼子板后段（短）
Rear Section Of Front Fender (Short)
WG1664235305/5306

前翼子板后段（长）
Front Fender Rear Section (Long)
WG1664235005/5006

后挡泥板总成（左/右）
Rear Fender Assembly (L/R)
WG1664235033/5034

后挡泥板
Rear Fender
WG9114951101

踏板（左/右）
Pedal (L/R)
WG1664245009/5010


www.howotrucks.com
WhatsApp: 0086 188 0866 8888



HOWO TRUCK SPARE PARTS



发动机配件系列 Engine Part Series

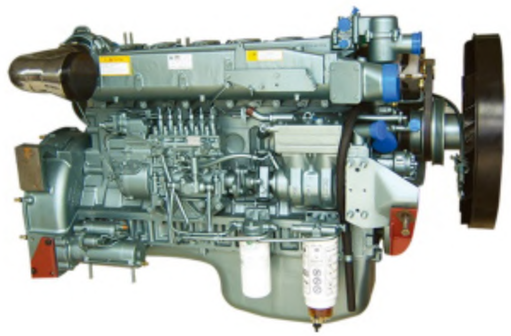


发动机总成 Engine Assembly



发动机总成 Engine Assembly



水泵 Water Pump

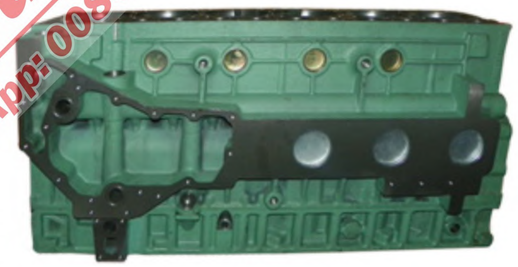

气缸体 Cylinder Block



曲轴总成 Crankshaft Assembly



重汽四配套
SINOTRUK Four Matching

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

发动机配件系列 Engine Part Series



重汽主机活塞环
SINOTRUK Main Piston Ring



湖南江滨活塞
Hunan Jiangbin Piston



重汽主机气缸套
SINOTRUK Main Cylinder Liner



涡轮增压器
Turbocharger



飞轮
Flywheel



飞轮壳
Flywheel Shell



齿轮室
Gear Room



连杆
Link



气门推杆
Valve Push Rod



气门弹簧
Valve Spring



气门摇臂
Valve Rocker



气门油封
Valve Seal



连杆螺栓
Connecting Rod Bolt



气缸盖
Cylinder Head



油底壳
Oil Sump



油气分离器
Oil And Gas Separator

www.howotrucks.com
WhatsApp: 0086 188 0866 8888



发动机配件系列 Engine Part Series



汽缸垫
Cylinder Pad



曲轴止推片
Crankshaft Thrust Piece



连杆瓦
Connecting Rod



机油泵
Oil Pump



中间齿轮
Intermediate Gear



喷油泵齿轮
Fuel Injection Pump Gear



空压机齿轮
Air Compressor Gear



凸轮轴齿轮
Camshaft Gear



输油泵
Pump



冷却器盖
Cooler Cover



机油冷却器芯
Oil Cooler Core



气缸盖罩
Cylinder Head Cover



风扇叶
Fan Leaf



排气歧管
Exhaust Manifold



进气管
Intake Pipe



出水管
Outlet Pipe

HOWO TRUCK SPARE PARTS



发动机配件系列 Engine Part Series



双缸空压机
Double Cylinder Air Compressor



起动机
Starter



气缸套
Cylinder Liner



活塞
Piston



发电机支架
Generator Bracket



喷油器总成
Fuel Injection Assembly



进气管垫
Intake Pipe Pad



排气管垫
Exhaust Pipe Pad



增压器垫
Supercharger Pad



气缸罩垫
Cylinder Head Gasket



凸轮轴衬套
Camshaft Bushing



气门座圈
Valve Seat



发动机前支撑
Engine Front Support



发动机后支撑
Engine Rear Support



空气滤芯
Air Filter



机油滤芯
Oil Filter

www.howotrucks.com WhatsApp: 0086 188 0866 8888



曼发动机配件系列 MAN Engine Parts Series



200V05504-0107
Oil Filter



VG1560080011
Rotary Fuel Meticulous Filter Assembly



WG9925550202/1
Filter



WG9725190103
Safety Filter Assembly



201V12503-0061
Fuel Filter Core



200V77970-7028
Refrigeration Compressors



080V01510-0280
Front Oil Seal



AZ1034121000
DCU



AZ1034121018
DCU



VG1246020005
Shock Absorber



200V05840-0128
Oil Sump Block



200V27120-7038
Speed Sensor



200V19101-0307
Generator Bracket



201V01510-0283
Crankshaft Rear Oil Seal



派克滤芯总成
Parker Filter Assembly



200V96820-0345
Multi-strap



200-10301-6161
Injector Inlet Pipe



202V27421-0263
Fuel Pressure Sensor



810W25424-0033
Wire Harness Assembly



WG9925550620
Primary Fuel Filter



WG1034121002
Injector



VG1038080007
Fuel Injector Assembly



200V10100-6126
Injector



200V10100-6127
Injector



200V06330-5041
Distribution Shell

HOWO TRUCK SPARE PARTS



曼发动机配件系列 MAN Engine Parts Series




202V06600-7050
Silicone Oil Fan (MC11)



082V06601-0282
Silicone Oil Fan (T5G)



200V11103-7792
High Pressure Pump

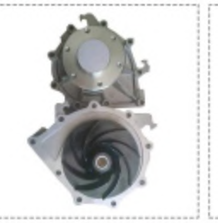

200V06500-6694
Water Pump



201-06600-6117
Fan Bracket Assembly



200V02410-0723-0724
Connecting Rod



200V98701-0120
Exhaust Pipe Seal Ring



(MC07)(MC11)
Piston Ring



200V12201-0417
Cylinder Liner



202V09100-7826
Turbocharger



080V02511-0721
Piston (MC07)



080V02502-0129
Piston Pin (mc07)



201-03100-6423
Cylinder Head Assembly

080-03100-6273
Cylinder Head Assembly

080V03901-0378
Cylinder Head Gasket

201-02400-6120
Connecting Rod Assembly

201-02301-6085
Flywheel Assembly

201V05800-6370
Oil Sump Assembly

201V95800-7477
Automatic Tensioner

201V95800-7479
Automatic Tensioner

201V95800-6099
Idler

VG1246060006
Flat Idler

201V54100-7121
Air Compressor

201V12150-0002
Hand Pump

202V27120-0002
Urea Level Sensor

www.howotrucks.com WhatsApp: 0086 183 0866 8888



HOWO TRUCK SPARE PARTS



曼发动机配件系列 MAN Engine Parts Series



200V26201-7199
Starter



VG1246090002
Starter



080V26201-7236
Starter



201V12501-7290
Fuel Filter Assembly



201V05000-7040
Oil Module



082V26101-7278
Generator



202V26101-7271
Generator



VG1095094002
Alternator



201V09411-5173
Intercooler Intake Pipe



200V06404-0083
Thermostat Housing



200V06302-0657
Coolant Elbow



201V06302-0643
Thermostat Outlet Pipe



201V09411-0664
Intake Elbow



202V15201-6188
Exhaust Brake Butterfly Valve



202V15201-6186
Exhaust Brake Butterfly Valve



202V09411-0868
Intercooled Intake Manifold



200V08102-0116
Front Row Manifold



200V08102-0234
Middle Exhaust Manifold



200V08102-0189
Rear Exhaust Manifold



WG9725478118
T7H Direction Machine



T7H 方向机
T7H Direction Machine



尿素液位传感器
Urea Level Sensor



WG9925550702
Oil Level Sensor



WG9925550004
Oil Level Sensor



201V06901-0192
Water Pump Seal

重汽变速箱配件系列 SINOTRUK GEARBOX PARTS SERIES



Gearbox Front Case (Push/Pull)
AZ2220000101



Gearbox Rear Case(with power take-off)AZ2220100105



Gearbox Mid-housing
AZ2220010102



Secondary Box Assembly
AZ2203100015



Countershaft Assembly (L/R)
AZ2203030101



Input Shaft (Push/Pull)
WG2210020101/0105



Spindle (with ball head assembly)
WG2210020111/0108



9、10、12、16 档
主轴（带球头总成）



High-grade Cone Assembly
AZ2203100004



Low-profile Cone Hub Assembly
AZ2203100005



Range Synchronization Sleeve
WG2210100008



Range Gear Synchro
WG2210100007



Range Synchronization Lock
WG2210100009

Inner Ring Gear And Ring Gear Bracket
WG2210100105/0006

DC50B PTO
AZ2201000002+002

Output Shaft Rear End Cover (old fashioned) WG2222100001

Output Shaft Rear End Cover (new) WG2222100005

Small Cover Assembly (double rod)
AZ2203210040+001

Range Cylinder
AZ2203210102

Range Shift Fork Shaft
WG2222100009

Range Shift Fork Shaft
WG2214100002

Input Shaft End Cover (pull/push)
WG2222020101/0001

Fork Shaft Assembly(old/new)
WG2203260006

1/2, 3/4 Down,
Crawler Fork Shaft Assembly

Fork
WG2214220001

Range Shift Fork / Splitter Shift Fork
WG2214100001/AZ2214230001

Fork Shaft Bracket (push)
AZ2203260101

Fork Shaft Bracket (pull)
AZ2229260001

Fork Swing Block
Insert Shift Fork Swing Block
WG2229100042/AZ2229230001

Planetary Mechanism Assembly
AZ2203100001+001

www.howotrucks.com
WhatsApp: 0086 188 0866 8888



HOWO TRUCK SPARE PARTS



重汽变速箱配件系列 SINOTRUK GEARBOX PARTS SERIES



Transmission Drive Gear(high)
AZ2210040073



Spindle First Gear
AZ2210040230



Countershaft Drive Gear
AZ2210030207



One-axis Gear
WG2210020102



Spindle Sleeve
WG2210040210



Planetary Wheel/Sun wheel
WG2210100104/ WG2210100101



Oil Pump Assembly
WG2203240005



Power Take-off Front And
Rear Shell Assembly



10、12、16
Shift Handle Ball



Air Lock Valve
AZ2203250010



Double H Valve Assembly
WG2203250001



Support Rod Assembly
Selector Lever Assembly



取力器拨叉
Power Take-off Fork



Countershaft End Cap
WG2222000001



Filter End Cap
WG2222240005



Nine/ten Gear Main And
Auxiliary Box Interlocking Plates



Lock Plate Pressure Plate (large)
WG2229100174



Lock Plate Pressure Plate
(small) WG2229100053



锁板垫板 WG2229100052（小）
Lock Plate



Blockage WG2229100071
Fixing Nut WG2229100011



各种油管
Tubing



各种空心螺栓
Hollow Bolt



Inner Tube
WG222924/01080107



Bolt
WG2229100073



Press Plate
WG2229100072



部分小件
Some Small Pieces



Spacer
WG2229100032



Low Pressure Hose
199000210053



Idler Washer
WG2210050001



Locking Plate
WG2229100074

电器元件，阀系列 Electrical Components,Valve Series



HOWO 08 Combination Meter
WG9719580035/1



HOWO 09 Combination Meter
WG9716580025/1



HOWO 12 Combination Meter
WG9716582201



HOWO A7 Combination Meter
WG9918580011



金王子12款组合仪表
Golden Prince 12 Combination Meter



金王子07款Golden Prince 07
Combination Meter



金王子08款Golden Prince 08
Combination Meter



金王子09款Golden Prince 09
Combination Meter

WG9130583050

WG9130583002

WG9130583003

HOWO 08 Combination
Instrument Beijing Wanji

HOWO 13 Right Control Module
WG9719581022/1

HOWO 08 Left Control Module
WG9719580001/1

豪沃12款电器接线盒
WG9716582301

HOWO 09 Electrical Junction Box
WG9716580021

MINI Controller
WG9716582001/2/3/4/5

CBCU Central Control Unit
WG9716580023

HOWO A7 Electrical Junction Box
WG9918580002

Golden Prince Electrical
Junction Box

斯太尔王电器接线盒
STR Electrical Junction Box

新款金王子接线盒 New
Golden Prince Junction Box

豪沃主控板
HOWO Main Control Board

共轨发动机ECU
Common Rail Engine ECU

EGR发动机ECU
EGR Engine ECU

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

电器元件，阀系列 Electrical Components,Valve Series


WG9000360100/3
Front Compartment


WG9000360600/2
Rear Compartment


WG9000360500/2
Dryer Assembly


WG9000360523/1
Four Circuit


WG9000360506/2
Relay Valve


WG9718360515/2ABS (WABCO)
The Electromagnetic Valve


Brake Master Valve (10 models)
Large Hole HOWO Golden Prince


Trailer Valve (07 Models)
HOWO (Small Hole)


WG9000360504/1
Manual Valve HOWO


WG9000360522/1 HOWO A7 (VOSS)
Manual Valve (WABCO)


WG9000360503/2 HOWO
Manual Valve (Large Handle)


WG9000360163/3 STR (W)
Manual Valve (Three Holes)


WG91305583117/1 HOWO
Combination Switch (08 Models)


WG91305830171 HOWO
Combination Switch (07 Models)


WG9725584009/1 HOWO A7
Cruise Combination Switch


WG91305831119 WG9625470030
Ignition Switch (08 Models) HOWO


AZ91305813019 HOWO STRW
Ignition Switch (07 Models)


WG9100760100 STR
Main Power Switch (07 Models)


WG9725764001 HOWO
Power Main Switch (08 Models)


WG1642741001 (09 Models)
Wiper Motor HOWO


Wiper Motor Golden Prince
(07 Models)


WG1642752108/2
Wiper Motor Golden Prince
(08 Models)


WG1642741001
Wiper Motor (with Bracket)
HOWO (08 Models)


QBKG
Rocker Switch HOWO


WG9725584020/2
PTO Knob HOWO

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

HOWO TRUCK SPARE PARTS


Traction Hook Seat
930028


Traction Hook Seat
930155


Traction Hook Seat
930106


Traction Hook Seat
930055


Traction Hook
930093/930036


Traction Hook Seat
930047


Traction Hook Pin


Bing
AZ9731470030


炳杆
WG9018470116


炳杆
WG9018470116


Yuanbaoliang
Full Double Layer


Steel Plate Splint 520266
Fixed Strip 520265


STR Front Cover 0002


HOWO07/08 Guide Plate
520365/520250


HOWO Power Cylinder Bracket
270244

HOWO Front Spring Plate
520037/520038

Stabilizer Rod Bracket
510009

HOWO Balance Clip
680041

HOWO Thrust Rod Bracket
AZ972550290/291

Thrust Rod Lower Bracket
HOWO 0294/0295

STR/HOWO Front Axle Shock
Absorber Connection Fork

Rear Steel Plate Bracket
520014/520012

HOWO Pump Bracket
AZ2229260015/16

HOWO 8–hole Cover
520366

HOWO 9 hole Cover
52026

HOWO 5–hole Cover
520244

HOWO Steel Plate Seat
520277/520279

HOWO V Push Stand
520361/520362

HOWO Joint Bracket 8*4
With Shaft
AZ9731520021/20

HOWO 09/10
Water Tank Bracket
975530517/527/637/647

www.howotrucks.com
WhatsApp: 0086 188 0866 8888



HOWO TRUCK SPARE PARTS





Rear Axle Air Chamber Bracket
HOWO AZ9231340943



Bridge Air Chamber Bracket
AZ9231340944



Bridge Air Chamber Bracket
AC16 WG9981340044



Rear Axle Air Chamber Bracket
AC16 WG9981340043



HOWO
Front Spring Front Bracket



Front Spring Front Bracket
WG9731520004



Front Spring Rear Bracket
WG9925520201



STR Front Spring Front Bracket
AZ9100520010



Front Spring Front Bracket
HOYUN NZ9525520045



Front Spring Rear Bracket
HOWO T7H WG9925520207



STR Front Spring Rear bracket
155、156



Front Spring Rear bracket
HOWO 520010/520011



Front Spring Rear Bracket
99100520155/156



A7 front spring front bracket
9925520201/520202



front Spring Front Bracket
HOKA 520530



Front Spring Rear Bracket
(HOYUN003/004)



HOWO Front Steel Lug
520034



70 Mine Front Ear
520038



STR Rear Ear
99101520079



Anti-drill Bar Small Bracket
HOWO 10 930830



豪沃 车门合页
HOWO Door Hinge



HOWO Toolbox Hinge
WG1642290002



Golden Prince
STRW Door Hinge



DELONG Door Hinge



HOWO A7 Front Face Hinge
AZ1664110021/22



HOWO
Hand Throttle Assembly



A7 Flip Shaft Bushing
430095



HOWO V Push Ball Head



HOWO Hydraulic Lock Bracket
WG1642440040/0041




HOWO Rear Axle
Connecting Fork And Seat

www.howotrucks.com
WhatsApp: 0086 188 0866 8888

HC16中桥驱动

HC16 1st Rear Axle Drive

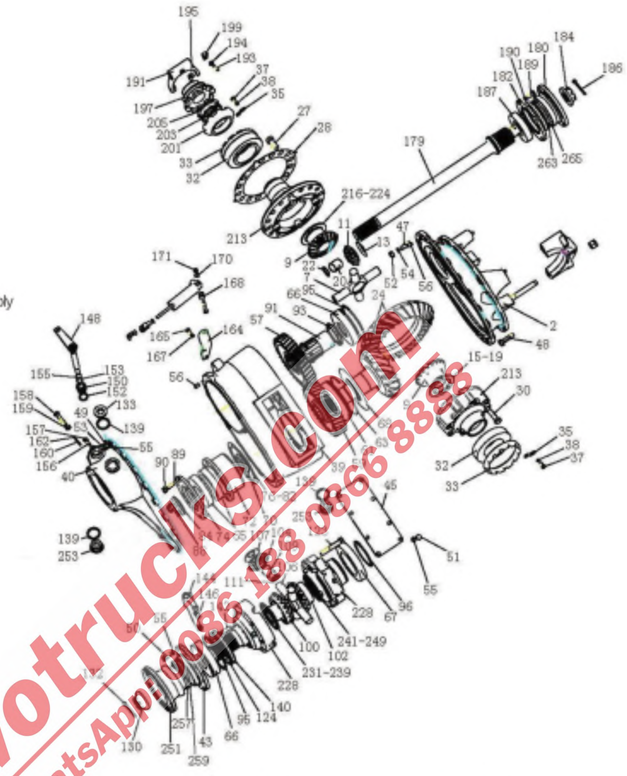

1	AZ9231320745	中桥中级(i=5.73,XS φ180,强化型差速器)	
2	WG9014320120	主减速器壳(中桥)	Final drive housing
7	AZ9231320150	十字轴	Cross-axis
8	190007991779	106号二硫化目(MO)	Molybdenum disulfide
9	WG9231320151	半轴齿轮	Gear
11	WG9231320152	行星齿轮	Gear
13	WG9231320153	行星齿轮垫片	Shim
20	WG9231320159	衬套	Bushing
22	WG9231320160	衬套挡圈	Ring
24	WG9114320251	锥齿轮副 28/17	Bevel gear & ring gear assembly
27	Q151B1635TF2	六角头螺栓	Bolt
28	WG9114320003	锁片-从动锥齿轮螺栓	Shim
30	WG9231320169	六角头螺栓	Bolt
32	190003326148	圆锥滚子轴承 32216 GB/T297-94	Tapered roller bearing
33	WG3809320159	差速器轴承调整螺母	Nut
35	WG79000320027	止动片	Shim
37	Q150B0816	六角头螺栓	Bolt
38	Q40308	弹簧垫圈	Spring washer
39	AZ9231320259	过桥箱	Bridge gear box
40	AZ9231320264	过桥箱盖	Cover
42	190003989279	锐形堵塞	Plug
43	WG9014320175	端盖	Cover
45	WG9114320178	接油板总成	Plate
47	190003813628	双头螺柱	Stud
48	Q1201225F3	双头螺栓	Stud
49	Q1201028F3	双头螺柱	Stud
50	Q150B1025	六角头螺栓	Bolt
51	Q150B1020Q	六角头螺栓	Bolt
52	Q340B12	Ⅰ型六角头螺母	Nut
53	Q340B10	六角螺母	Nut
54	Q40312	弹簧垫圈	Spring washer
55	Q40310	弹簧垫圈	Spring washer
56	Q5211016	圆柱销	Pin
57	WG9014320136	主动圆柱齿轮	Drive gear
59	WG9014320137	从动圆柱齿轮	Driven gear
61	WG9014320257	滚柱轴承	Cylindrical roller bearing
63	WG9014320256	钢丝档圈	Circlip
65	190003326333	圆锥滚子轴承	Tapered roller bearing
66	190003311543	有止动槽的向心球轴承	Ball bearing
67	190003310239	带防尘盖深沟球轴承	Ball bearing
68	WG9014320174	挡油片	Shim
70	WG9014320140	隔圈	Spacer
72	WG9014320129	轴承座	Bearing cage
74	WG9014320128	轴承外环压板	Plate
76	WG9014320131	调整垫片	Shim
78	WG9014320132	调整垫片	Shim
80	WG9014320133	调整垫片	Shim
82	WG9014320134	调整垫片	Shim
84	WG780 320088	轴承压板	Plate
86	WG9114320002	防松锁片-轴承压板紧固螺栓	Shim
88	Q150B1430TF2	六角头螺栓	Bolt
89	190003813543	双头螺栓	Stud
90	Q33210	2型全金属六角锁紧螺母	Nut
91	WG9014320135	空心轴	Shaft
93	WG9012250031	开槽园螺母	Nut
95	Q433130	轴用压扁钢丝挡圈	Circlip
96	190003933580	轴用弹性挡圈	Circlip
100	WG9231320225	前半轴齿轮	Gear
102	WG9231320226	后半轴齿轮	Gear
104	WG9231320227	行星齿轮	Gear
106	AZ9231320223	十字轴	Cross-axis
107	WG9231320224	行星齿轮垫片	Shim
109	WG9231320221	衬套	Bushing
111	WG9231320222	衬套挡圈	Ring
123	Q151C1280TF2	六角头螺栓	Bolt
124	WG9014320061	轴间差速器壳垫片	Shim
130	WG79000320013	凸缘螺母	Nut
132	Q5005055	开口销	Pin
133	WG81500010163	螺塞	Plug
139	Q72336	密封垫圈--Q72336铝	Gasket
140	WG288 320105	差速锁锁环	Ring
142	WG288 320106	差速锁销	Pin
144	WG9014320053	拨叉	Fork
146	WG1800 320077	拨叉活动块	Block
148	WG9014320076	差速锁摇臂总成	Rocker arm assembly
150	WG2700 320037	衬套	Bushing
152	AZ9231320038	O形圈(26502240GB3452)	O-ring
153	WG288 730062	O型密封圈	O-ring
155	190003933072	轴用弹性挡圈	Circlip
156	190003902070	开槽长园柱端紧定螺--螺钉	Screw
157	Q340B08	1型六角螺母	Nut
158	Q150B1050Q	六角头螺栓	Bolt
159	Q340B10	六角螺母	Nut
160	WG69000330008	销	Pin
162	Q43705	轴用钢丝挡圈	Circlip
166	Q150B0818	六角头螺栓	Bolt
167	Q40308	弹簧垫圈	Spring washer
168	WG61000060072	隔套	Sleeve


www.howotrucks.com
WhatsApp: 0086 188 0866 8888



HOWO TRUCK SPARE PARTS




HC16中桥驱动
HC16 1st Rear Axle Drive

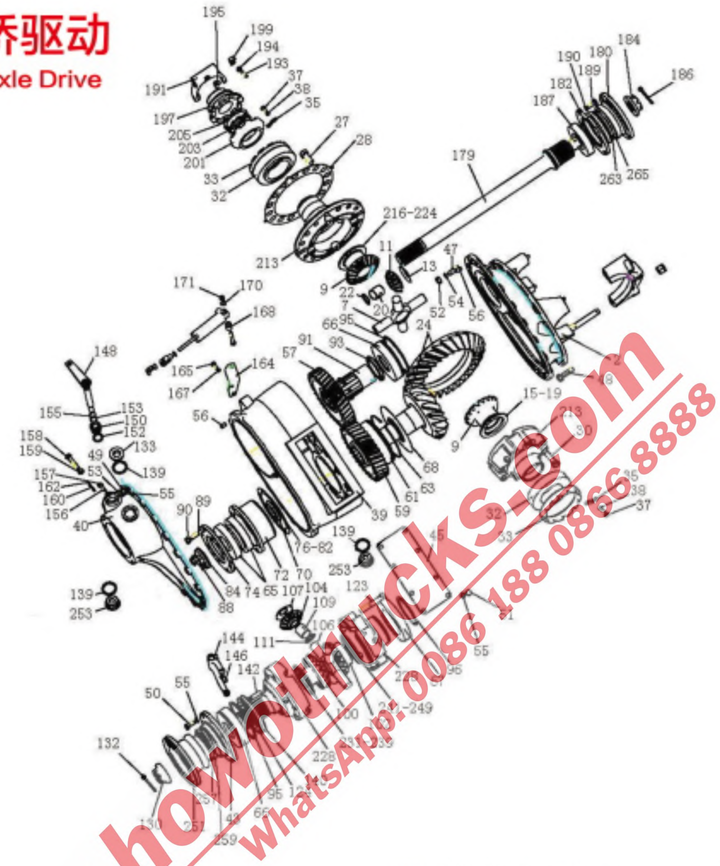

170	Q40108	平垫圈	Washer	220	WG9231320156	调整垫片	Shim
171	Q3208	2型全金属六角锁紧螺母	Nut	222	WG9231320157	调整垫片	Shim
177	WG2297Y4835	铭牌	Name plate	224	WG9231320158	调整垫片	Shim
179	AZ9231320261	贯通轴	Through shaft	226	WG9231320260	过桥箱盖	Cover
180	WG9231320205	Φ165轮边凸缘总成	Flange assembly	228	WG9231320271	差速器壳	Differential housing
182	WG9231320141	轴承盖	Bearing cage	231	WG9231320091	半轴齿轮(前)垫片	Shim
184	WG79000320013	凸缘螺母	Nut	233	WG9231320092	半轴齿轮(前)垫片	Shim
186	Q5005055	开口销	Pin	235	WG9231320093	半轴齿轮(前)垫片	Shim
187	WG9231326212	双列圆锥滚子轴承	Tapered roller bearing	237	WG9231320094	半轴齿轮(前)垫片	Shim
189	Q150B1030	六角头螺栓	Bolt	239	WG9231320095	半轴齿轮(前)垫片	Shim
190	Q40310	弹簧垫圈	Spring washer	241	WG9231320096	半轴齿轮(后)垫片	Shim
191	WG9012320014	拨叉	Fork	243	WG9231320097	半轴齿轮(后)垫片	Shim
193	Q2800825	开槽锥端紧定螺钉	Screw	245	WG9231320098	半轴齿轮(后)垫片	Shim
194	Q340B08	1型六角螺母	Nut	247	WG9231320099	半轴齿轮(后)垫片	Shim
195	WG1800 320077	拨叉活动块	Block	249	WG9231320100	半轴齿轮(后)垫片	Shim
197	WG3809320156	滑动啮合套	Sleeve	251	WG9231320014	XS φ 180凸缘总成	Flange assembly
199	WG9231320023	弯板	Plate	253	WG9231330015	磁性螺塞总成	Plug
201	WG3809320155	固定啮合套	Sleeve	255	WG9231320262	托架总成	Bracket assembly
203	WG3809320158	锁止垫片	Shim	257	WG9231320026	轴密封圈	Gasket
205	WG3809320157	圆螺母	Nut	259	WG9231328772	轴密封圈	Gasket
212	190003904529	标牌铆钉--铆钉	Rivet	261	WG9231320142	贯通轴纸垫	Paper washer
213	WG9231320272	差速器壳	Differential housing	263	WG9231320026	轴密封圈	Gasket
216	WG9231320154	调整垫片	Shim	265	WG9231328772	轴密封圈	Gasket
218	WG9231320155	调整垫片	Shim				

HC16后桥驱动
HC16 Drive of 2nd Rear Axle

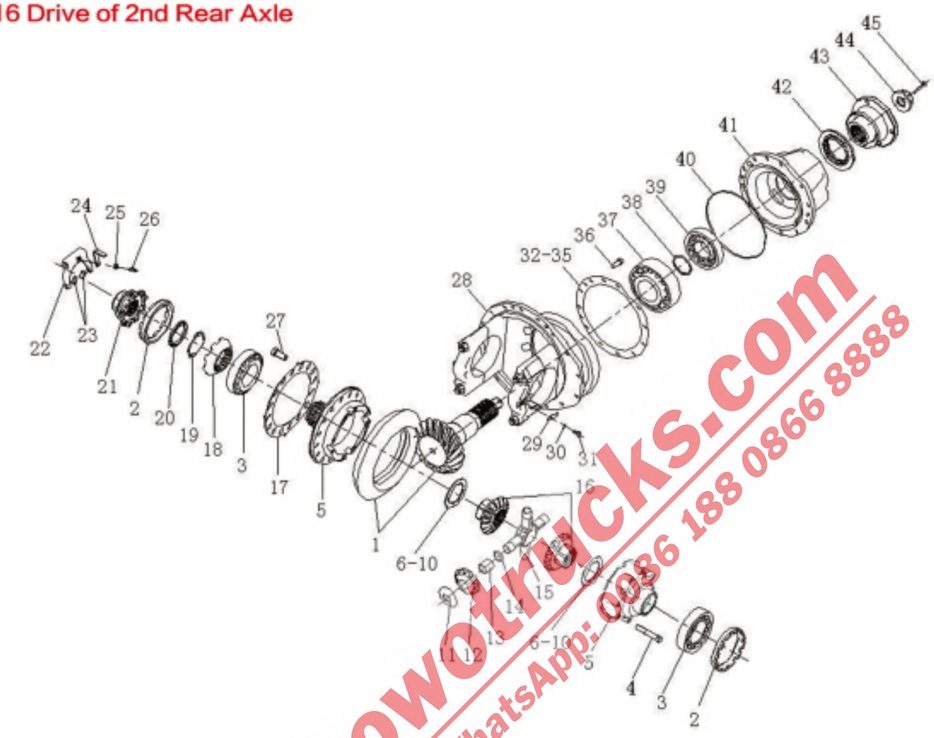

1	WG9231320913	锥齿轮付28/17	Bevel gear pair	25	ZQ340B08	1型六角螺母M8	Hexagon nuts ,style 1
2	WG3809320159	差速器轴承调整螺母	Nut	26	Q2800825	开槽锥端紧定螺钉	Screw
3	190003326148	圆锥滚子轴承	Tapered roller bearing	27	ZQ151B1635TF2	六角头螺栓M16*1.5*35	Hexagon head bolts
4	WG9231320169	六角头螺栓	Bolt	28	199012320098	主减速器壳	Final drive housing
5	WG9231320273	差速器壳	Differential housing	29	WG79000320027	止动片	Shim
6	WG9231320154	调整垫片	Shim	30	Q40308	弹簧垫圈	Spring washer
7	WG9231320155	调整垫片	Shim	31	ZQ150B0816	六角头螺栓M8	Hexagon head bolts
8	WG9231320156	调整垫片	Shim	32	WG9012320173	调整垫片(厚0.1)	Shim
9	WG9231320157	调整垫片	Shim	33	WG9012320174	调整垫片(厚0.15)	Shim
10	WG9231320158	调整垫片	Shim	34	WG9012320175	调整垫片(厚0.4)	Shim
11	WG9231320153	行星齿轮垫片	Shim	35	WG9012320176	调整垫片(厚1)	Shim
12	WG9231320152	行星齿轮	Gear	36	Q150B1230TF2	六角头螺栓	Bolt
13	WG9231320159	衬套	Bushing	37	190003326547	圆锥滚子轴承 32315	Tapered roller bearing
14	WG9231320160	衬套挡圈	Ring	38	AZ7121320001	调整垫片组	Shim
15	AZ9231320150	十字轴	Cross-axis	39	190003326236	圆锥滚子轴承 30312	Tapered roller bearing
16	WG9231320151	半轴齿轮	Gear	40	WG9012320133	密封圈	Gasket
17	WG9114320003	锁片-从动锥齿轮螺栓	Shim	41	WG9012320103	轴承座	Bearing cage
18	WG3809320155	固定啮合套	Sleeve	42	WG9231320001	主减油封总成	Oil seal
19	WG3809320158	锁止垫片	Shim	43	WG7121320132	XS φ 165凸缘总成	XS φ 165 Flange assembly
20	WG3809320157	圆螺母	Nut	44	WG79000320013	凸缘螺母	Nut
21	WG3809320156	滑动啮合套	Sleeve	45	Q5005055	开口销	Pin
22	WG9012320014	拨叉	Fork	46	WG2297Y4835	铭牌	Name plate
23	WG1800 320077	拨叉活动块	Block	47	190003904529	标牌铆钉--铆钉	Rivet
24	WG9231320023	弯板	Plate	48	190007991779	106号二硫化目(MO)	Molybdenum disulfide

www.howotrucks-com
WhatsApp: 0086 188 0866 8888




HOWO TRUCK SPARE PARTS



MCY13中桥驱动


MCY13 1st Rear Axle Driv

1	810-35199-6648	被动-主动锥齿轮副参数表(37：9)	BEVEL DRIVE PINION
2	Q5006332	开口销6.3X32-ST-A4C	COTTER PIN
3	810W35125-0024	调整螺母	Nut
4	810W93420-0183	圆锥滚子轴承32024	TAPER ROLLER BEARING
5	MQ6028163416	六角头带法兰螺栓	HEX BOLT
6	811-35105-0193	差速器盖	Cover
7	810W35107-0032	行星轮轴(L=292,5MM)	PIN
8	810W90714-0248	行星轮垫片	Shim
9	810W35107-0031	行星轮轴(L=138,5MM)	PIN
10	812W35108-0078	行星齿轮	Gear
11	812W35106-0055	半轴齿轮	Gear
12	810W35613-0050	止推垫片	Shim
13	811-35105-0062	差速器壳	Differential housing
14	810-35301-6104	中桥主减壳带轴承盖总成	AXLE HOUSING
14.1	Q151C20110TF2	六角头螺栓	Bolt
14.2	810W35302-0082	轴承盖（左）	BEARING CAP
14.3	810W35302-0072	轴承盖（右）	BEARING CAP
14.4	Q5220816	圆柱销	Pin
14.5	810-35301-0102	中桥主减壳	Final drive housing
15	810-35617-6007	后半轴齿轮总成	Gear assembly
15.1	810W93020-0574	衬套	Bushing
15.2	810W35617-0007	后半轴齿轮	Gear
16	810W93420-6096	圆锥滚子轴承32215	TAPER ROLLER BEARING
17	810W39135-2021	挡油罩	Oil shield
18	810W35606-0011	轴间差速器壳	DIFFERENTIAL HOUSING
19	810W35609-0013	行星齿轮	Gear
20	810W35608-0035	十字轴	Cross-axis
21	811W35610-0052	主动圆柱齿轮(Z=37)	LAYSHAFT GEAR
22	810W90770-0272	S=4,00垫片	ADJUSTING WASHER
23	811W93021-0398	衬套	Bushing
24	810W35621-0002	隔环	Spacer
25	810W35204-0041	止推垫片	Shim
26	810-35611-0019	输入轴	Input shaft
27	810W35614-0017	拨叉	Fork
28	810W35612-0020	啮合套	SHIFT SLEEVE
29	810W93420-0097	圆锥滚子轴承31313	Tapered roller bearing
30	810-35602-0028	主减壳盖	COVER
31	810W56289-0394	油封	Oil seal
32	810W35125-0048	调整螺母	Nut
33	810W35140-0016	锁片	Shim
34	MQ2100820TF2	M8*20*[illegible]	HEX BOLT
35	810W39115-5113	法兰总成KV130	DRIVING FLANGE
36	810W90685-0303	锁紧螺母	Nut
37	WG9003960024	内六角锥形螺塞DIN906-M24X1.5-st	Plug
38	MQ6032230608	[illegible]	SCREW
39	811W35631-0010	气缸盖	Cylinder head
40	810W35925-0018	密封垫	Gasket
41	810W35632-0001	气缸衬套	BUSH
42	MQ6563312269	34X3 B-NBR 3-70 活塞O形圈	TORIC SEAL
43	MQ6028152812	六角头螺栓[illegible]	HEX BOLT
44	MQ6021912611	内六角圆柱头螺钉	Screw
45	MQ6028143014	六角头螺栓(轴承座与主减壳连接螺栓)	HEX BOLT
46	Q5211232	圆柱销	Pin
47	810W35619-0006	拨叉轴	Shaft
48	810W97602-0893	压缩弹簧	Spring
49	MQ6151140419	22X30X0,5拨叉调整垫片	ADJUSTING WASHER
50	810W90685-0303	锁紧螺母	Nut
51	811W35610-0047	被动圆柱齿轮(z=37)	LAYSHAFT GEAR
52	810W35601-0039	轴承座（中桥）	PINION CASE
53	810W93420-0097	圆锥滚子轴承31313	Tapered roller bearing
54	810-90702-0065	调整垫片组-主动锥齿轮	SHIMS
55	810-90770-0100	调整垫片组-主减轴承	AUSGLEICHSCHEIBE GROUP
56	810W32499-0192	圆锥滚子轴承80×165×57	TAPER ROLLER BEARING
57	810W32589-0069	圆柱滚子轴承322722	ROLLER BEARING
58	Q43745	A45轴用挡圈	CIRCLIP
59	WG2297Y4835	铭牌	Name plate
60	WG9003960024	内六角锥形螺塞DIN906-M24X1.5-st	Plug
61	MQ6151142119	22X30X1拨叉调整垫片	ADJUSTING WASHER

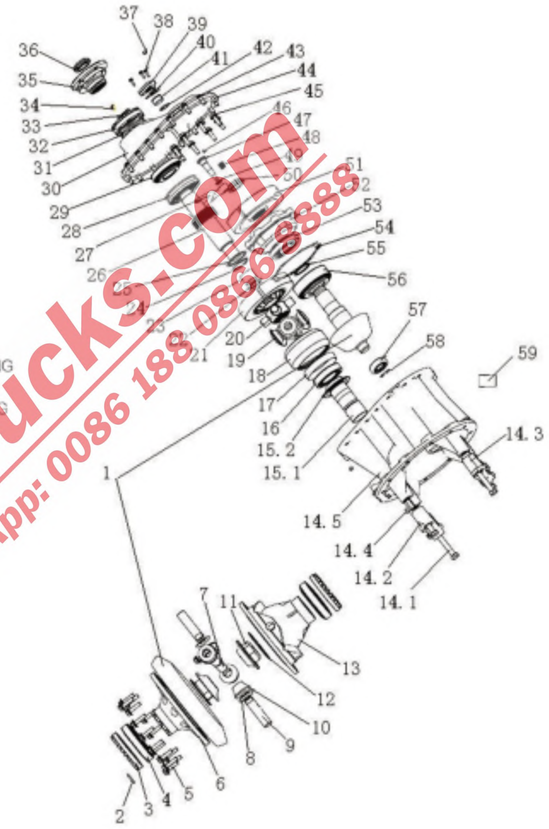

MCY13后桥驱动

MCY13 Drive of Rear Axle

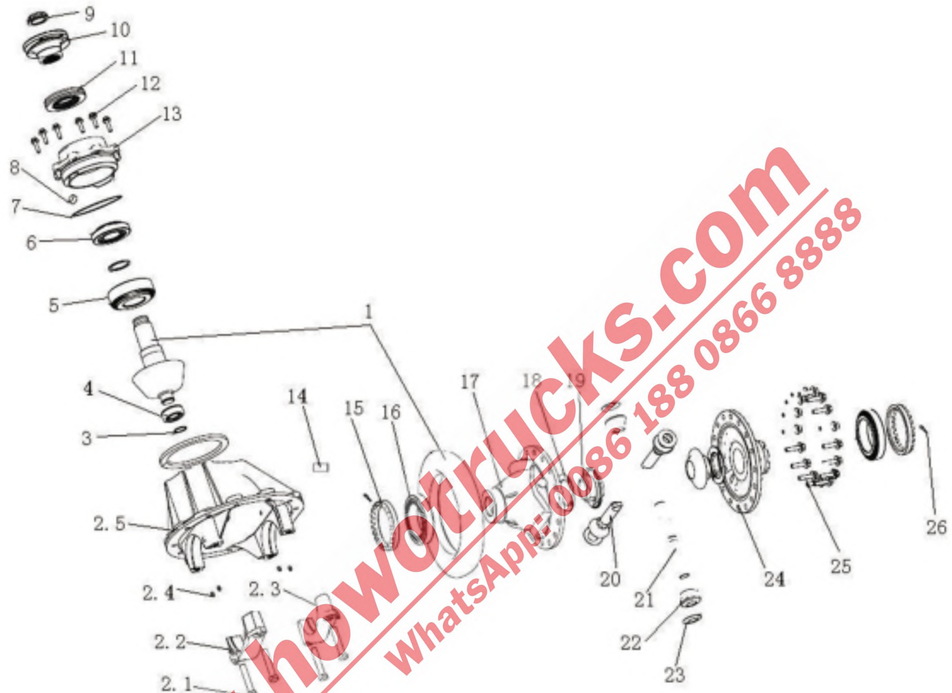

2	810-35301-6116	后桥主减壳带轴承盖总成	AXLE HOUSING
2.1	Q151C20110TF2	六角头螺栓	Bolt
2.2	810W35302-0071	轴承盖（左）	BEARING CAP
2.3	810W35302-0072	轴承盖（右）	BEARING CAP
2.4	Q5220816	圆柱销	Pin
2.5	810-35301-0108	后桥主减壳	Final drive housing
3	Q43745	A45轴用挡圈	CIRCLIP
4	810W32589-0069	圆柱滚子轴承322722	ROLLER BEARING
5	810W32499-0192	圆锥滚子轴承80×165×57	TAPER ROLLER BEARING
6	810W93420-0097	圆锥滚子轴承31313	Tapered roller bearing
7	MQ6569364424	O形圈(190 X3)	TORIC SEAL
8	WG9003960024	内六角锥形螺塞DIN906-M24X1.5-st	Plug
9	810W90685-0303	锁紧螺母	Nut
10	812W39115-5105	法兰总成KV165	ZSB KUPPLUNGSFLANSCH
11	810W96503-0442	油封(后桥主减)	RADIAL SHAFT SEAL
12	MQ6028135014	六角头螺栓（轴承盖与主减壳）	HEX BOLT
13	810W35601-0040	轴承座（后桥）	PINION CASE
14	WG2297Y4835	铭牌	Name plate
15	810W35125-0024	调整螺母	Nut
16	810W93420-0183	圆锥滚子轴承32024	TAPER ROLLER BEARING
17	811-35105-0062	差速器壳	Differential housing
18	810W35613-0050	止推垫片	Shim
19	812W35106-0055	半轴齿轮	Gear
20	810W35107-0031	行星轮轴(L=138,5MM)	PIN
21	810W35107-0032	行星轮轴(L=292,5MM)	PIN
22	812W35108-0078	行星齿轮	Gear
23	810W90714-0248	行星轮垫片	Shim
24	811-35105-0063	差速器盖	Cover
25	MQ6028163416	六角头带法兰螺栓	HEX BOLT
26	Q5006332	开口销6.3X32-ST-A4C	COTTER PIN
27	810-90770-0100	调整垫片组-主减轴承	AUSGLEICHSCHEIBE GROUP
28	810-90702-0065	调整垫片组-主动锥齿轮	SHIMS

www.howotrucks.com
WhatsApp: 0086 188 0866 8888